

zub

Instruction Manual

zub – zenv



To open,
press both sides
of the strap


General Description

3.0VDC Operating Voltage
32,768 Hertz Quartz Crystal
Oscillation Frequency
Four button operation
TDF LCD Display
Electroluminescent (EL) Backlight
(with Auto-EL option)
Alarm / Stopwatch

NOTE:

B button has an important
role in controlling how the
zub works. Please follow
our guidelines carefully to
see how 'pressing' and
'holding' a button can have
different functionality.

If idle for 30 seconds, system sets last input.

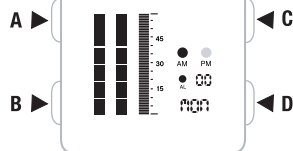


A: Light, C: Key tone

Q.

BASIC DISPLAY MODES


To get to the right mode, **PRESS** B button...

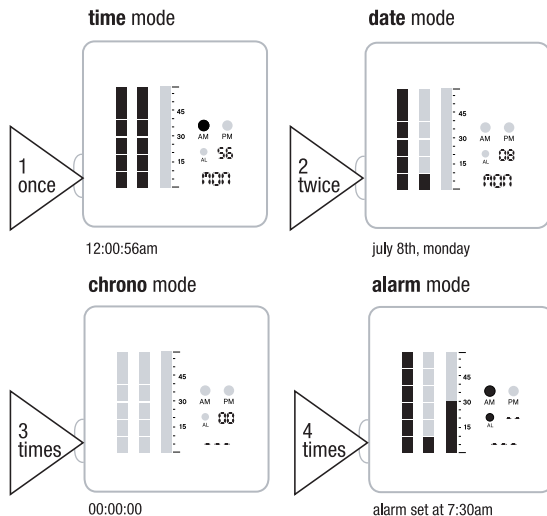

Q.

How do I set **TIME**?


First, set your mode to the time mode. (See basic display modes)

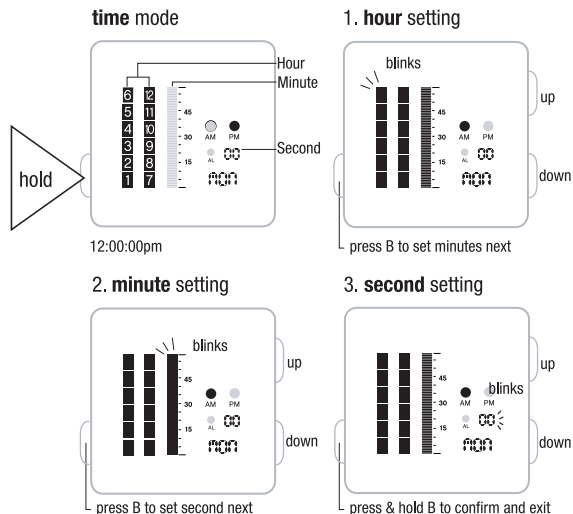

Q.

How do I set **ALARM**?

First, set your mode to the alarm mode. (See basic display modes)

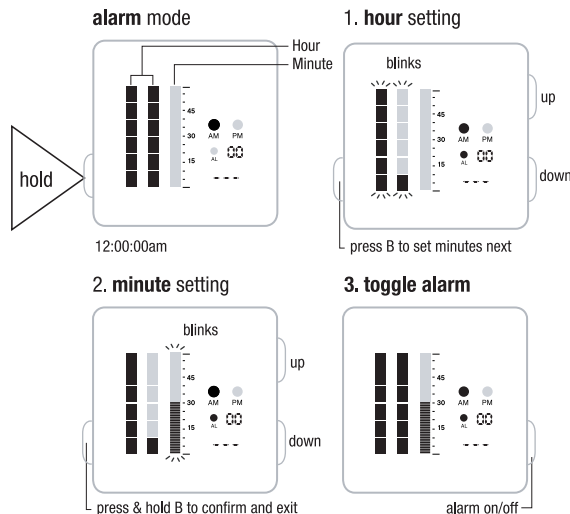

Q.

What do I do after I replace batteries?

After changing the battery, wait until the watch display re-appears, then press all 4 buttons together to reset.

What do I do if I need a repair or replacement?

All watches come with a warranty against manufacturer defect or failure for a period of 90 days from the date of purchase. This warranty covers replacement or repair of the product, which is determined by availability, and the time of purchase. Replacement is often used within 30 days after purchase with the same product or like product when repair service is unavailable. Please note: Watch bands and batteries are NOT covered by this warranty. Proof of purchase is required.

Do you have a return policy?


First, contact the retailer from where your watch was purchased, as it may be covered under their return/repair policy. If your watch is not covered by the retailer and is still within our direct warranty, please contact us at: service@nookawatch.com to obtain an RMA number and address to send defective merchandise. Service outside of the warranty period is provided with a small parts and labor charge, please inquire.

Function and specs are subject to change, please check for latest instruction book updates on <http://www.nooka.com/service>

Q.

How do I set **DATE**?


First, set your mode to the date mode. (See basic display modes)

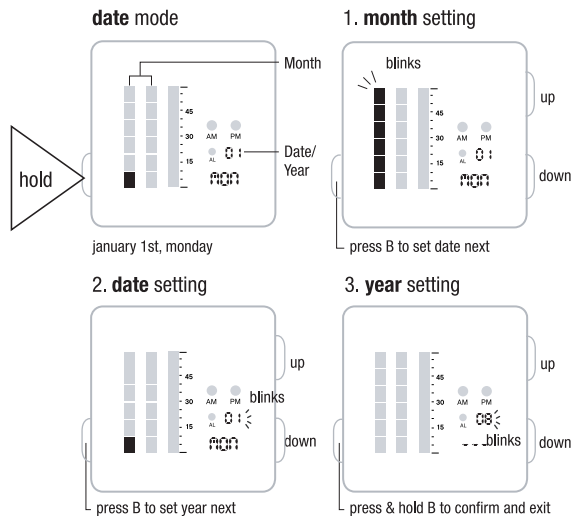

Q.

How do I use **CHRONO MODE**?

First, set your mode to the chrono mode. (See basic display modes)

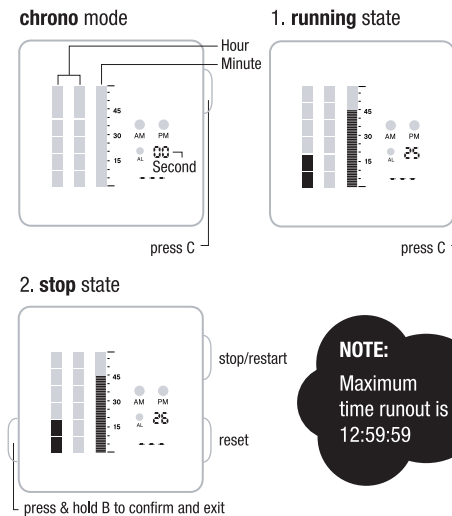

NOTE:
Maximum
time runoff is
12:59:59

W.

WARRANTY ticket

Model	
Serial number	
Customer Name	
Address	
Phone	Date of purchase
Retailer Information	

NOOKA INC.
16 West 36th Street Suite 1302
New York, NY 10018
www.nooka.com

Nooka is registered trademark of Nooka Inc., All Rights Reserved.
US Design Patents: Des. 403,607, Des. 403,608 and Des. 403,609.
©1998-2006 Nooka Inc., All Rights Reserved.